


Start with either tool A/B/C from joint line and/or edge of form.

*Tips: Have enough tools to span your project all the way to the other end plus two more to start the next row



Traditional

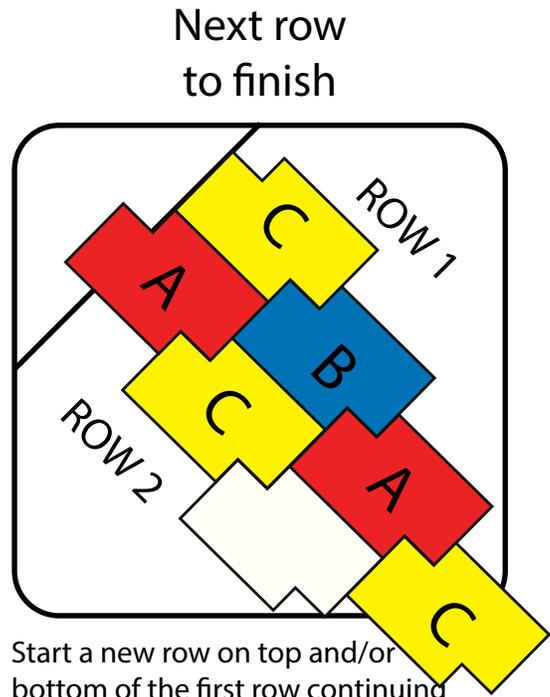

Start a new row on top and/or bottom of the first row continuing the interlocking pattern continue this till the end of the project.

*Tips: Avoid putting the same tool twice in the same row

Mixed for best results

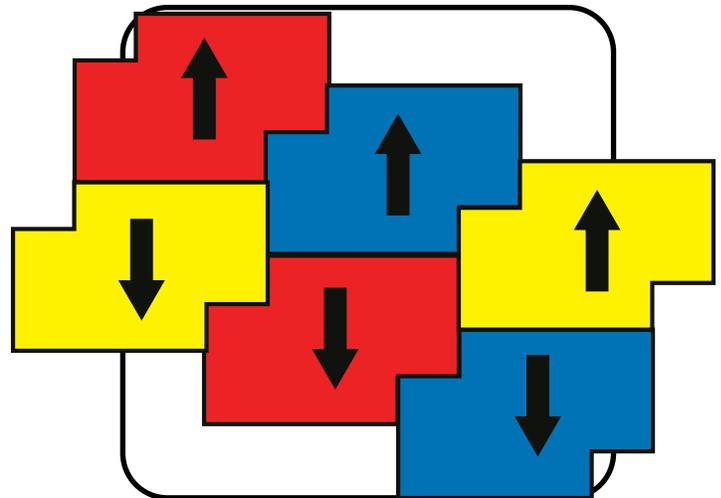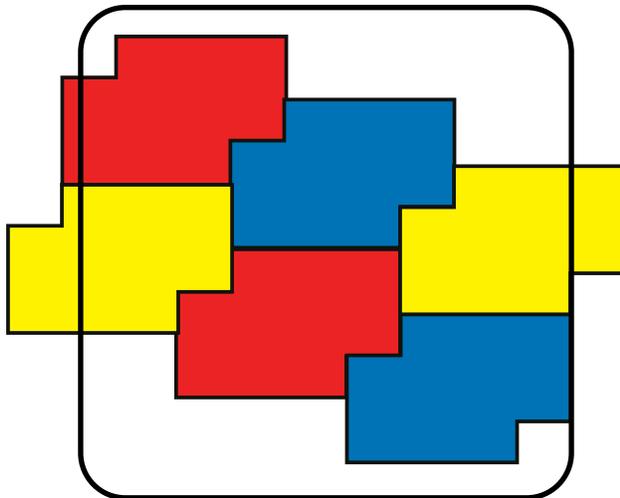

*Tips: Use our flex tool and/or the the super flex tool for up against walls or objects

prolinestamps.com

TEL: 1-800-795-4750 Toll free